

**NEW**

# UNIVERSAL DPM/COUNTER-TIMER

**Current Loop, Signal or External Powered**

**Replaces: Any 2"x 3"x .5" Flat Pack**

**UPM-F**

**PATENT**  
#9,054,721 B1



NO PANEL CUT OUT.  
JUST DRILL  
3/8" Ø HOLE, PASS  
WIRES THROUGH  
AND CONNECT

### SECTIONS:

- DPM: Pages 2-6
- COUNTER: Pages 6-12
- REMOTE DISPLAY: Page 12
- ORDERING INFORMATION: Pages 13 & 14

### FEATURES:

- \*6 Digits: 9.9.9.9.9.9 (Counter/Remote Display) or -1.9.9.9 (DPM)
- \* INPT FAIL Alarm with Run Time Stamp
- \*Self Diagnostics
- \*Isolated Serial I/O: USB/RS485
- \*Ethernet/Modbus on Request.
- \*Only 100mW@5VDC or Powerless™
- \*Intensity Control Via Serial Port
- \* Math functions (+, -, x, √, ÷, X-Y tables, polynomials)
- \*Averaging: None to 255
- \*Alpha Characters Selectable
- \*Power Input Options: 5, 7-32VDC & 90-265VAC

### (External Powered Models Only)

- \* >30 Isolated Input Signals
- \*4-20mA/30V Output
- \*Ethernet

### All Models:


- \*Lifetime Warranty

**DESCRIPTION:** The Universal Panel Meter (UPM) series combines over 40 years of experience with the latest ASIC uC and ultra-efficient multicolor LED technology to bring you into the 21st century. The **UPM** external power series features over 30 signal conditioners to replace form, fit and function any analog or digital input panel meter. If not, we'll make it!

Our patented hardware and firmware gives you the highest reliability (we have a lifetime warranty) at the lowest cost, with features such as: automatic (programmable) tricolor display (like a traffic light); automatic signal fail detect (open or short); indication and serial transmission with run time stamp and units ID, isolated retransmission (4-20mA), and universal power inputs (5-32VDC or 90-265VAC). The **UPM** Series offers several math functions such as X-Y tables, polynomials and log-anti-log functions.

The **UPM** signal and external power series also feature isolated USB, RS485 or ethernet, open collector transistors (4/channel) and SPDT relays (4/channel). You can tell us your custom needs and we'll make it (or might already have it)!

The **UPM-F** is available in either a loop (4-20mA), A.C. or D.C. signal or external power version. The external powered versions can accommodate 4 relays, isolated DAC and power for the analog output (per channel), include >30 signal conditioners and isolated input power options, as well as ethernet and flash memory (µSD). Standard factory set color changes are: red: <10, >90%, yellow: <20, >80%, green: >20, <80% of F.S. Use digit 14, option 9 for custom configuration (you can change it with simple commands).

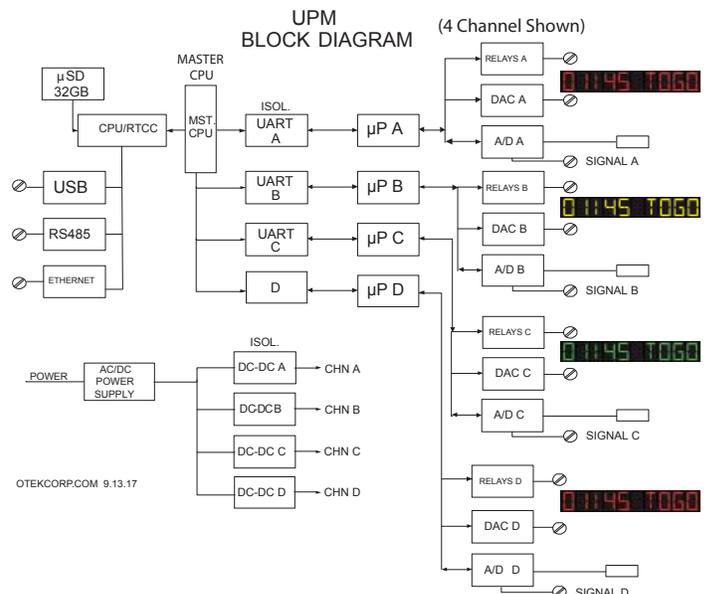

520-748-7900  
 FAX: 520-790-2808  
 E-MAIL: sales@otekcorp.com  
 http://www.otekcorp.com



4016 E. TENNESSEE ST.  
TUCSON, AZ. 85714 U.S.A.

MADE  
IN  
USA



## WHAT CAN YOU DO WITH OTEK'S NEW UPM/DPM FUNCTION?

All models share the same award winning software and hardware (patent #9,054,721 B1). This allows you to implement the following applications, restricted only by the hardware limitation of each model and your imagination. **Note:** contact us about **Otek's Powerless™ Technology**: If your signal cannot supply  $\geq 10\text{mW}$  ( $\sim 3\text{V}/3\text{mA}$ ), use an external power model. See pages 6-12 for **UPM**-Counter functions and Page 12 for remote display/controller.

**1. One Channel Only Model:** Implement any math function, X-Y table (25 point), polynomials (9<sup>th</sup> order), offset, zero, scale, tare, log & anti-logarithmic to affect the unit's display at will. Some examples are: change the display & data using any combination as commanded by your algorithm, such as  $+/-/X/\div/\sqrt{\quad}$  or set a variable or linearize the display using X-Y tables or polynomials. This works well for odd shape containers. You can also change the reading from °F to °C or °K or compress/expand the display (and data out) using the log and antilog functions. In addition, you can change the factory default alarm set points and colors or delete them.

**Note:** Model UPM-F only offers internally accessible USB serial I/O for configuration and mathematical functions. Use digit 14 option 9 and specify your custom calibration, or use our free GUI.

Contact Otek for custom access to micro **USB**.

### DIGIT 5, SERIAL I/O & MEMORY:

Not available on the **UPM-F**.

### DIGIT 6, GRADE:

Industrial Grade (Options 0 or I) is per these published specifications. Grades **M** and **E** per agreed specifications. Options **E & M** typically include an EMI/RFI shield all around and filtered connectors to meet EPRI-TR-102323-R3 (requiring  $\sim 2"$  deeper case). OTEK will build to certain nuclear or MIL-Standards but testing and confirmation of compliance, if required, will be quoted as a separate line item.

**Security:** Password protected access to the UPM's HW and software. Complies with NEI 08-09 cyber security mandates. **Front Panel Controls:** None for added security and safety. Nuclear and MIL-Spec version comply with NEI 08-09 and/or 10CFR50, 10CFR59 and 10CFR 73.54 on request.

## Description & Notes

### DIGIT 6, GRADE: (CONTINUED)

Option **0** is 94VO plastic, option "**I**" is an aluminium nickel plated case and cover; bezel face has black powder coat finish to Mil-Specs. The back cover is either black plastic or nickel plated aluminum. Typical Mil-Specs: 461, 462, 169, 901, 801, RTCA-160, I EEE344, etc. Contact Otek for custom colors.

### DIGIT 7, (# CHANNELS):

This model offers only 1 channel, 6 characters, 0.6" high tricolor. Digit 7 must be option 1 or 9.

**DIGITS 8 & 9 (INPUT SIGNAL): SECTION A:** See Input Signal Conditioners section (pages 6-8) for description and specifications.

### DIGIT 10 (POWER INPUT):

#### LOOP & SIGNAL POWER ONLY:

**Digit 10, Option 0, Powerless, No Power Required:** The **Input Fail** detect/Alarm (patent pending) flashes the display "INPT FAIL (INPT FAIL)" and transmits this serial message for  $\sim 20$  seconds, after which it will cease. This feature is available in all models. If desired on powered models, use option **9** on Digit **14** and specify "input fail detection." Signal Fail Requirement: Unit must be "On" for at least 1 minutes at  $>50\%$  of full scale for it to operate.

#### EXTERNAL POWER ONLY:

**Digit 10, Options 2, 3, 4:** Not available on the **UPM-F**.

**Digit 10, Option 5, Non-Isolated 5VDC:** 5VDC is used to drive the relays ( $<50\text{mA}/\text{relay}$ ) and/or the DAC via internal isolated 5-30VDC-DC ( $<200\text{mA}$ ). If you order relays and analog out, you will need  $\sim 300\text{mA}/\text{channel}$ . This option is also isolated from the input signal.

**Digit 10, Option 6, Non-Isolated 7-32VDC:** Same as option **2** but with wide input range of 7-32VDC. Efficiency:  $>75\%$ .



# Description & Notes

**Digit 11 (Control Outputs):** Not available on model UPM-F.

**Digit 12 (Analog /Power Output):** Not available on model UPM-F.

**DIGIT 13 (SCALE PLATE):**

**Digit 13, Scale Plate:** Option **0** is a standard scale plate that reads 0.0-100.0% or nothing depending on the model number. Use option **9** for custom printing and contact Otek.

**DIGIT 14 (RANGE/CALIBRATION):**

Option **0**= Factory Default = 0-Full Scale=0.0-100.0 digits. Colors: <10>90%: Red; <20>80%: Yellow; >20<80%: Green. For custom colors, use Option **9** (custom) and contact Otek. Also see Control Outputs (Digit 11). You can program it for other values, none or via the serial port. Default messages: **INPUT FAIL**, **LLAL**, **LALM**, **HHAL** and **HALM**.

**OTHER IMPORTANT DATA:**

**Math Functions:** +, -, x, ÷, √, Log/Anti-Log, Polynomials to 9th order, 25 Point X-Y table, zero, offset, span and tare. You can add, subtract, multiply, divide (etc.) one channel to/from another channel and display the result in the other channel (i.e. V (Ch.1) xA(Ch.2)=W(Ch.3). We do it for Watts on options 12, 13, 14, 70-75 and 80-83.

**PID:** Programmable (best with 2 or more channel models) automatic or manual with external 10K Ohm potentiometer (option **56**). See models our **NT Series** for dedicated 4-20mA transmitters (same technology).

**SAME HOUSINGS, DIFFERENT FUNCTIONS**



The **NTM (New Technology Meter)**: The same patented technology for analog input only. All else is the same as the **UPM**, but has an automatic tricolor bargraph for trend indication.



The **NTT (New Technology Transmitter)**: Since the **NTM** & **UPM** have 4-20mA outputs, they are transmitters. So, we build them specifically for 4-20mA transmission, change the housing for DIN-Rail or panel mount or explosion proof and you're the winner. No NRE, NO R&D! What's next? **TPM? SSAM?**

**ABOUT OUR INPUT FAIL DETECTION**

Only available on Powerless™ models (8th & 9th digits, options 00-18). While in normal operation, we store excess energy and use it to power the **UPM** if and when the signal fails (post mortem).



Build Your Own Part Number/User's Manual or Receive a Quote Online at: <http://www.otekcorp.com/configurator/upm/>

**CLASS 1E  
10CFR50 APP. B  
MIL-SPEC &  
INDUSTRIAL  
GRADES**



**SECTION A: DPM****Input & Display: See Below For Input Signals:**

**Note 1:** E and M grade electrical specifications are the same as Industrial unless otherwise specified.

**Note 2:** OTEK reserves the right to change specifications without prior notice to improve the performance of its products.

\* A/D: Accuracy, Linearity & Resolution: +/- 0.5% of F.S., ±1 LSD.  
Conversion Rate: 40/sec, Averaging: 0-255, zero, span, offset, tare and math functions.

\* Digits: Four Full Active Digits (9.9.9.9 & -1.9.9.9); 0.6" High, Alphanumeric Auto-Tricolor (R/Y/G), 15 segments

\* Typical Power Consumption of Display: 10-100mW@3.3V-5V; \loop/signal power version best at > 8mA.

\* Temperature Coefficient: +/-50PPM/°C

\* Operating Temperature: -10 to +60; Storage: -20 to +70°C

\* CCMR: >90dB@50-60Hz

\* Isolation: >500VDC to any other I/O & P.S.

\* Humidity: 5-95% RH non-condensing

\* Front Panel: NEMA 3. NEMA 4X on request.

\* Failed Signal Detect: ~ 20 seconds after > 1 minute @50% of F.S. Only on loop & signal powered models.

**Note 3:** See the master catalog for environmental specs vs. housing.

**The Powerful Powerless™**

Yes! You can have the **UPM** (DPM mode only) powered by the input signal and have controlling outputs such as relays, O.C.T. & analog output!

**How it works:** Your input signal (Digit 8 & 9, options 00-18 only) powers the display, CPU, serial I/O and isolators. Your external power source powers the outputs (if included).

**Benefit:** You have two independent and isolated sources (fail safe).

**Requirement:** Your signal must produce >10mW (current loop, VDC, VAC or AAC) and sustain <4V burden. If not, use external power (options 20-85 on Digits 8 & 9).

**AC Signal Power & Outputs?** Yes, you can have both input options 01-18 (digits 8 & 9) and relays (2 maximum) without external power!

**Requirements:** VAC input must be >90<140VAC, and AAC input must be >1.5<4 AAC via C.T. Ideal to monitor and control 120VAC mains! Contact OTEK for details.

**Important Note on A.C. Powerless**

The **NTM**, **UPM** & **NT** Series can extract energy from your A.C. signal to power itself and opto isolated serial, optional O.C.T. (Digit 11, options 1, 3, 5 or 7), and to power the optional 4-20mA output (not 20-4mA out) from a wide input range (see specifications on pages 6-8). External power is required to power the optional relays (Digit 11, options 2, 4, 6 & 8) (200mW each). If you need relays, either use the external powered options on Digits 8 & 9 (33, 37, 40 or 42) and Digit 10 power input options (1-4) or use Powerless™ options 01-04 on Digits 8 & 9 and Power Input option 09 (custom) on Digit 10 and specify (09=Power for relays and DAC). Result: The signal will power the instrument and will include our patented **Signal Fail Detection & Alarm**. The relays and analog output are powered by the external power option (all 100% isolated).

**INPUT SIGNALS (Digits 8 & 9):**

**Note:** Otek's exclusive Input Fail detect (open or short) is standard on all inputs. Use option 29 and specify if you want it disabled (also field configurable).

**Note:** Actual connection will vary. See the User's Manual for specific connection information.

**Note:** All ±1 LSD and % full scale range unless noted. Also see Note 1 in "Section A: DPM" above.

**IMPORTANT NOTE:** Options 02 through 18 on Digits 8 & 9 are not available on the UPM-F.

**Option 00 For Loop Power Only:**

**Option 00, Loop Powered:** Burden: < 4V; Range: 3-26mA; \ Accuracy & Linearity: ±0.5% of F.S., ±1 LSD.



**Option 01 for A. C. Signal Powered Only**

**FUSE IT!** Use external 1/2 ASB for Volts and 7 ASB for Amps.

**Note:** C.T. (Current Transformer) are sensitive and limited to the secondary (output) impedance. OTEK A.C. signal powered products present and input impedance of  $\sim 0.2 \text{ Ohms}$  ( $\sim 1\text{V}@5\text{A}$ ). Make sure your C.T. can drive a  $>0.3 \text{ Ohm}$  load without saturating or losing linearity. Contact Otek for assistance. Best C.T. to use:  $>100:5$ .

**Note:** All inputs for 50-60 Hz lines. Contact Otek for 400 Hz lines.

**Option 01, VAC P.T. (Potential Transformer):** Burden: 0.2 Ohm &  $<100\text{mW}$ ; Range: 30-140V/40-100Hz; Accuracy & Linearity:  $\pm 0.5\%$  of F.S. Best operating range 90-140VAC to specifications.

**Options 20 through 58: For Externally Powered Only:**

All input channels have the same specifications unless noted. See options 60-89 for mixed signals.

**Option 20, 4-20mA:** Burden:  $<25 \text{ Ohm}$  (0.5V); Range: 3-26mA; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Options 21 through 24, VDC:** Input impedance 1M  $\Omega$ ; Range: Per Option; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Options 25 & 26, mADC:** Input impedance Option 25: 50 $\Omega$ ; Option 26: 5 $\Omega$ ; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 27, Watts DC (1Vx1A DC):** VZin: 1M  $\Omega$ /AZin: 1.0 $\Omega$ , 5W; Range: 1W; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 28, Watts DC (1Vx1V):** VZin: 1M for both inputs; Range: 0-1V; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**NOTE:** Always use P.T. or C.T. with H.V. Lines (Options 30-34).

**Options 30 through 34:** VRMS: Zin: 1M $\Omega$ ; Range; per options; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Options 35-37, Amps RMS:** Zin: Option 35: 2 $\Omega$ ; Option 36: 0.2 $\Omega$ ; Option 37: 0.04 $\Omega$ ; Range: Per option; Accuracy & Linearity:  $\pm 0.5\%$  of F. S.

**Options 20 through 58: For Externally Powered Only:**

**Option 38: Watts RMS (1Vx1V AC/DC):** Zin: 1M $\Omega$  for both inputs; Range: 1V RMS; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 40, Watts RMS (120VAC P.T. x5AAC C.T.):** Zin: 1M for V & 0.04 $\Omega$  for A; Range: 0-750W; Accuracy & Linearity:  $\pm 0.5\%$  of F.S. Note: Shunt resistor (0.04 $\Omega$ ) supplied.

**Option 41, Frequency (10KHz/5V Logic):** Zin: 1M; Range: 30-10KHz; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 42, Hertz (120V, 40-100Hz):** Zin: 1M; Range: 50-150VC/40-100Hz; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 43, Hertz (240V, 30-100Hz):** Zin 1 M; Range: 100-260V/30-100Hz; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 44, Hertz (120V, 500 Hz):** Available on a Powerless (90-140VAC/370-420 Hz) or external powered unit. For external power, just use option 44 on Digits 8 & 9 and specify. On the Powerless model, use option 09 (Custom) on Digit 8 & 9 and specify Option #44. (requires  $>1$  watt from input signal). For 240 VAC/400 Hz, use option 29 & specify.

Zin: 1 M; Range: 50-150V/300-500Hz; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Note on Strain Gages:** Specify impedance, sensitivity, range and calibration. Example: 350 Ohms, 2mV/V, 10mV=0-100.0%.

**Option 45, Strain Gage ( $<1\text{K}\Omega$ ):** Excitation: 4V; Range: 300-1K  $\Omega$ ; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 46, Strain Gage ( $>1\text{K}\Omega$ ):** Excitation: 4V; Range: 1K-5K  $\Omega$ ; Accuracy & Linearity:  $\pm 0.5\%$  of F.S.

**Option 47 & 48, RTD: 47:** 100  $\Omega$  (PT100); **48:** 1K  $\Omega$  (PT1000); Range: same as RTD; Excitation: 0.5mA; Accuracy & Linearity:  $\pm 0.5\%$  of F.S. 2, 3 or 4 wire RTD. For 3 wire, connect -E to -S. For 2 wire, also connect +E to +S. Warning: Max distance to sensor:  $\sim 300$  Feet (100 M) or use our NT transmitters.

**Note for Options 47-52:** You can switch from  $^{\circ}\text{F}$  to  $^{\circ}\text{C}$  via serial port or use option 29 and specify. Default:  $^{\circ}\text{F}$  (uses internal linearized table).



SECTION A: UPM-DPM ANALOG INPUT SIGNAL  
UPM-F SPECIFICATIONS (Digits 8 & 9)

Note: You can change factory standard calibration via the serial port.

Options 20 through 58: For Externally Powered Only:

Option 50, Type "J" TC: Range: -210 to 760°C; Colors: red and white; CJC: Included; Accuracy & Linearity: ±2°C of F.S.

Option 51, Type "K" TC: Range: -270 to 1370°C; Colors: Yellow and red; CJC: Included; Accuracy & Linearity: ±2°C of F.S.

Option 52, Type "T" TC: Range: -270 to 400°C; Colors: blue and red; CJC: Included; Accuracy & Linearity: ±2°C of F.S.

Note for Thermocouples (TC): Shorting out the +/-TC input terminals will display the ambient temperature of the C.J.C. at the input terminals.

Option 53, pH: Range: 0-14.00; Zin: >10<sup>15</sup>Ω; Temperature compensation: None; Accuracy & Linearity: ±0.5% of F.S.

Option 54, ORP: Range: 0-2000mV; Zin:>10<sup>9</sup> Ω; Accuracy & Linearity: ±0.5% of F.S.

Option 55, % RH: Range: Per sensor; Input Type: 2-3 pF Capacitance; Accuracy & Linearity: ±0.5% of F.S. State sensor's specifications.

Option 57, 10-50mA Range: 10 Ohms input resistance Accuracy & Linearity: ±0.5% of F.S. ±1 Digit.

Option 56, Resistance Range: 0-10K Ω=0-100%=0-100.0; Accuracy & Linearity: ±0.5% of F.S.

Option 58, None: Serial input only as per Digit 5 for remote/display controller.

SECTION B: COUNTERS

B) THE UNIVERSAL COUNTER/TIMER CLOCK (Digit 15, Options 1-9 and A-L):

The UPM can function as a universal counter: It accepts digital inputs to perform over 20 functions, all of which can be selected by serial input commands.

SECTION B: COUNTERS

B) THE UNIVERSAL COUNTER/TIMER CLOCK

(Digit 15, Options 1-9 and A-L): (Continued)

Functions: Batch – Debouncer – Draw – Frequency – Integrations – Julian Clock (RTC) – Log/Anti-Log Extractor – Period – Phase Angle – Positioning – Quadrature – Range – Rate (1/F) – Ratio– Square Root – Stopwatch – Time Interval – Totalizer – Up/Down Counter –Up/Down Timed (Milliseconds to years!).

Features: Fully configurable for any listed function via serial port.

\* Same features as DPM section except it is only offered in external power (Digit 10, options 1-4).

\* Same features as NTM series except it has an Alpha-Numeric Tricolor Display instead of a bargraph.

\* Multiple isolated displays (up to four) allow for complex math functions/display/control of process variables such as Volts/Amps/Watts/Frequency/Pressure/Flow/Volume and temperature, and PID or redundant control.

\* Three angle positioning (X, Y, Z).

\* Intelligent (HMI) moving messaging (up to 18 characters).

\* Automatic process control (MMI) and much more.

Input and Output Terminals and How To Use Them:

Note: Not to be confused with input signals for measurement.

Besides the regular input signal terminals, the UPM has other external terminals to control its functionality. These functions can be enabled via serial command or managed by the internal function selected. Refer to customized user's manual.

Terminals that are already dedicated and controlled externally have a 5K pull up to the isolated 5VDC of its channel and only accept 5V logic levels or dry contacts.

Borrow (only in the first stage of a string): Connect "Borrow" pin to "Carry" pin of previous unit (or channel) to expand the number of channels.

Carry (only in the last stage of a string): Connect "Carry" pin from the first unit to the "Borrow" pin of the next unit (or channel) to expand the number of characters.



**Input and Output Terminals and How To Use Them:**

(Continued)

**Count Hold (Digit 15, Options 5, K, L):** "Grounding" this pin (5K pull up) forces the counter to stop counting.

**Display Hold (Digit 15-, Options F, K):** "Grounding" this pin (5K pull up) holds the display, but allows the counter to continue counting.

**Frequency out (Digit 15, Options 5, F, K):** This pin is the F out of the signal conditioner after it has been converted to 5V logic levels. Minimum load=1K Ohm. Useful for F-V.

**Run/Stop (Digit 15, Option G):** This pin is functionally the same as "Counter Hold" except has a  $<1\mu\text{S}$  response time.

**Frequency Response (No De-Bouncer):** Useful for DCS/SCADA/PAC interface,  $<1\mu\text{S}$  response time.


**Reset (Digit 15, Option 5):** This pin is used to reset the internal accumulated count and has no De-Bouncer since its used in "Frequency" counter (up/down) modes. Response time: $<1\mu\text{S}$ .

**Up/Down (Digit 15, Option 3):** Leave this pin open for "UP" count or "ground" it for "DOWN" count. If connected to an encoder, connect "UP" into "A" and "DOWN" into "B" and "RESET" to "Z" for rotary zero detect encoders.

**Inputs/Functions (Digits 8 & 9 and 15):** Conditions: If digits 8 & 9 have options 00 through 58, 60-68, 70-78 or 80-88, then digit 15 must be option "0 (None)."

**Up/Down Counter (Option 1):** (also see "Quadrature" counter)  
A counter is a totalizer that can be enabled/disabled by several means such as an input (gate), a command (serial), or a result of another action produced by your algorithm, such as  $\text{CHA} + \text{CHB}/\text{CHC} = 0$ . Therefore, start/stop counts or times on CHD, which can be useful to synchronize 3 phase power lines or radiation counters. If you use the F-V option, you can convert analog signals to digital format for higher accuracy synchronizing. Imagine the possibilities limited by your algorithm!

UPM FIG 1: u/DC, Option 1

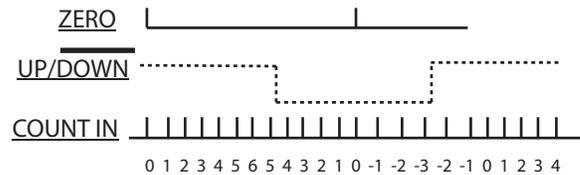

**Totalizer (Counter) (Options 2 & 1A-4C):** This function accumulates the number of pulses received on Input A after Input B has been taken high ( $\uparrow$ ), will sum the events for as long as Input B remains high and will decrement on the falling edge ( $\downarrow$ ) of Input B. You can switch the logic of Inputs A and B via simple commands and by using the command "TOTDN" (totalizer down) instead of "TOTUP" (totalizer up), you can enable any controlling output/message (relay, O.C.T., DAC, color change, message, etc.).

**Multiplier:** (also see "Divider") In some applications the input data needs to be multiplied to arrive at unity count such as tanker to barrels, barrels to gallons, gallons to liter, etc. Select the appropriate multiplier of your choice with up to four decimals (xxxx.yyyy).

**Divider:** (also see "Multiplier"): Some applications require counting in multiples of units such as dozens/bag, gallons/barrel, liters/cask, etc. Just select the divider number and count in desired unit of measurement ( $1/2$ ,  $1/56$ ,  $1/500$ , etc.).




## SECTION B: COUNTERS (Continued)

**Quadrature (Option 3):** (also see "Datum Zero") This function includes inputs for Input A (count), Input B (direction), and Input Z (datum zero). When Input A rising edge (↑) leads Input B rising edge, the **UPM** will increment its count by one (1). When Input B leads Input A, it will decrement its count by one (1). Regardless of Logic state of Inputs A or B, when Input Z transitions from Logic 0 to 1, the **UPM** will reset to zero. This is important when using rotary encoders to indicate the zero degree point. Again, the resolution of the measurement is determined by the number of pulses/rotation of your encoder and the multiplier you select. But you can display/control the process in decimal or clock (360°:60M:60S) format. Linear encoder is used for length measurements/control, rotational encoders for rotational (degrees) applications. The automatic tricolor change will warn the operator of anomalies.

The **UPM** can be forced to zero count via a serial command or an OR connection at the Z Input since it has a 10KΩ pull up to 5V (high to reset to zero, low to run). The Z (zero) pulse should be as short as possible (>1μS) to avoid missing a count.

UPM FIG 3: Quad A, Option 3

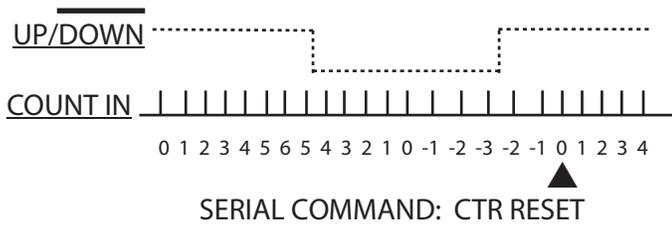

**Batch (Option 4):** Use "Batch" to count or measure specific amount of product in a container. Example: gallons in a barrel, peanuts in a jar, pills in a bottle, etc.


**Batch Total:** Use "Batch Total" to add the total number of batches of a specific product. Example: barrels in a tanker, jars in a box, boxes in a skid, skids in a truck, etc.

UPM FIG 4: Batch, Option 4




**Frequency (Option 5):** Use "Frequency" to totalize the number of pulses over a fixed measure of time. Example: 60 Hz = 60 cycles or pulses/second such as a household electrical line, 94.652 MHz might be the transmitting frequency of a radio broadcaster, etc. Note: "Frequency" is normally defined as events (pulses) per second (10/s, 1k/s/MHz). "Rate" is defined as events (pulses) per minute, hour, day for slow-occurring events versus a unit of time. See Rate (1/F), such as in oil rigs.

UPM FIG 5: Frequency, Option 5

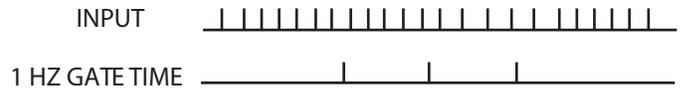

**3.1 Zero Datum:** (also see "Quadrature" and "Up/Down" Counter) This single pulse/revolution is produced by rotary encoders to indicate 0° and it is used by the **UPM** to zero its display and start counting up or down in a degree fashion with degrees, minutes, second, and milliseconds of rotation determined by the resolution of your encoder. For linear measurements, use command "LIN." For rotational, use the command "ROT."


UPM FIG 3.1: Quad B, Option 3

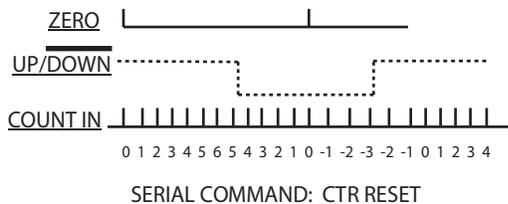

## SECTION B: COUNTERS (Continued)


**5.1 De-bouncer/Filter:** UPM's Debouncer (Filter) function is useful when the input signal is from relay contacts that "bounce" or are of an AC nature. Select a "debouncer" time base that covers the worst case condition of the bouncing signal. Relays typically have a bouncing time of 5–20mS, so a time base >25mS will be safe to use. However, if the switching (on-off) speed of the relay is <30mS, you should not use a time base greater than 25mS. The best time base would be approximately >15 and <20mS. This is also useful for AC power lines (>18mS for 60 Hz, >22mS for 50 Hz, or >3mS for 400 Hz power lines).

UPM FIG 5.1: De-Bounce, Option 5

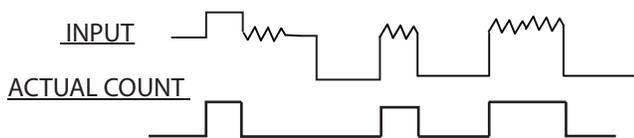

**5.2 Burst:** There are applications where it is desirable to measure the "burst" of a frequency input and ignore the base frequency. In this case, select a gate time > the minimum (maximum normal) burst frequency. Example: Normal: < 1 kHz, burst > 1.5 kHz < 20 kHz. Select a gate of 1.4 mS. The UPM will only display the burst's frequency of approximately 3.2 kHz. Want to count the number of bursts? Enable the counter function and the UPM will display the number of bursts since last reset.

UPM FIG 5.2: Burst, Option 5

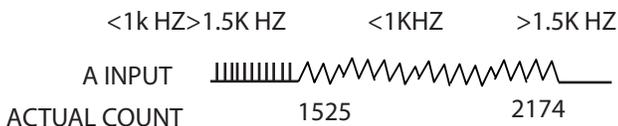

**Period (Option 6):** Use "Period" to measure/control the duration (width) of a signal transition from Logic 0 to Logic 1 (low -> high). Its measurement resolution is determined by the gate time selected (10 μS to 10 sec.). Again, you can use the math functions to meet your algorithm needs such as CHA + CHB, CHA - CHB, CHC x CHD, CHC/CHB/√, etc.

**RADs (Option 7):** Also known as units of radiation (radiation absorption dose) or "grey" units in SI. Radiation transmitters/sensors produce either analog output (4-20mA) or pulses. If pulses per "grey," you can accumulate (totalize) the number of pulses over a period of time. If analog, you can integrate logarithmically the total "dose." See integrator.

**REMs (Option 8):** A.K.A. Si (Sievert). Radiation detectors/transmitters produce either a pulse per unit of radiation (~0.01 Sievert) or analog signal (usually mV or 4-20mA). In either case, the UPM accepts both signals and if pulsed, it totalized the number of pulses received. If analog, it uses the integration function, along with the log or anti-log (contracting or expanding) for the reading and gives you the accurate rate (dose) of accumulated radiation in an area.

**Custom (Option 9):** Contact OTEK for your custom algorithm/application. Typical custom design that replaces F, F & F obsolete 20mA C.L. (teletype) input 1960's technology with the UPM-R.

(UPM-R)  
1.5x5" Case



**Up/Down Timer (Option A):** Just like the Up/Down Counter (Option 1), but instead of using external pulses to count, the UPM uses its internal programmable time base to increment/subtract its count. Default is one (1) second, range is 1 μs to 10 seconds.

**Time :** There are three (3) times: **time interval** (Option B), **elapsed time** (Option C) and **range time** (Option D).




## SECTION B: COUNTERS (Continued)

**Elapsed** time means time that has occurred from the starting point and range time means estimated time to end of task (if all conditions remain as they are). Elapsed time requires a time base selection, a "Start" pulse and an "End" pulse, both rising edge (positive Logic). Range time requires a time base selection (mS to seconds), a reference input signal (events/time base), and a "Total" goal or destination value.

**Note:** You can enable/disable the up/down function via serial command.


Example: Assume you want to know how long it will take to fill a tanker, whose capacity is 164,000 barrels, at a present rate of 3450 barrels/hr. However, if the rate varies to 2945 or 3649/hr, how long will it take in seconds, minutes, hours, or days? The **UPM** will automatically update its display and serial output as well as its analog output (for PID control) to inform you of the calculated end of process. All math functions are available for you to automatically select multipliers, dividers, or external variables as required. Also, you can use the V-F input option to convert analog inputs (4-20 mA, 1-5 V, etc.) to events for the range time algorithm. If you have a mileage "Range" indicator in your car, the **UPM's range** function works the same.

### UP/DOWN TIMER

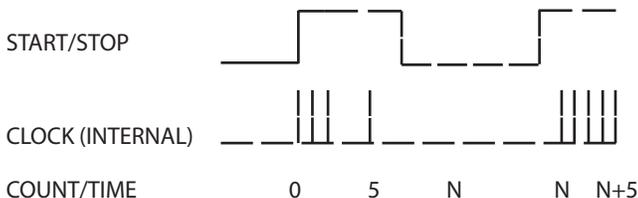


**Time Interval (Option B, continued):** This measures the time interval between two (2) inputs A and B and starts on the rising edge (↑) of Input A and stops on the rising edge (↑) of Input B. Alternatively, you can select the falling edge (↓) or start with Input B and select your time base (μS to seconds) and any actions to occur (relay, O.C.T, display change, math functions, average, etc.). If you use a "Gate Time" function, you can display/control the average of all the pulse widths that occurred during the gating time.

### INTERVAL

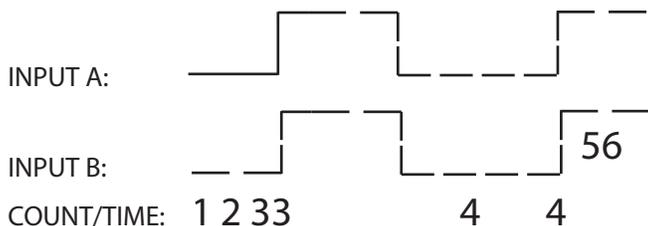

**Elapsed Time (Option C):** Depending on the model selected (number of characters/digits), you can display/control events in days, hours, minutes, seconds, mS, and μS (D:365, H:24, M:60, S:60, μS:000,000 for a 15 digit model(s) or 5 digits for the smallest package (-L). Use the relays, O.C.T. or analog output to control your process by setting limits/alarms (usually 00:00:00).

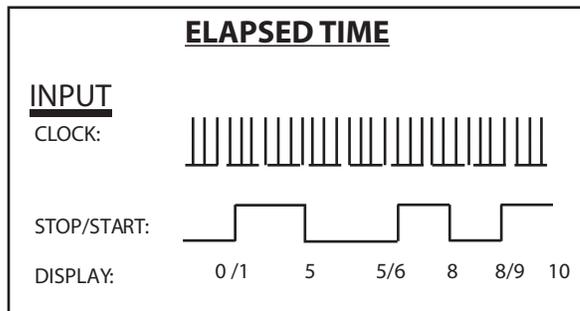

**Range (Option D):** This function is extremely useful in determining how long (range) the asset your have (fuel, beans, water, etc.,) will last you if you maintain the present usage at the present rate. It's no different than a retiree wishing that his money will outlast him, or wondering if you have enough gas to get to the next gas station or calculating whether the rods in a reactor will last until the next "load" arrives. All you need to do is enter the value of "In Stock," and the **UPM** will use prior (if programmed into the memory) information to determine the range. You can also enter the rate/unit (unit=time, events, etc.) and the **UPM** will calculate the range.

Contact [sales@otekcorp.com](mailto:sales@otekcorp.com) with information on your transducer. You'll need to provide data such as:

- 1) Existing fuel intake
- 2) Fuel used (if not full)
- 3) Present consumption/time

The **UPM** will calculate the range based on actual use of fuel per unit of time or events.



**Julian Clock {RTC} (Option E):** Use "Julian Clock (RTC)" to indicate time, date, and year and control any loads via the four relays or analog output (4-20 mA) of any channel. Four and five digit models alternate the display as follows:

2014 (year) \*\*12 (mo.) \*\*27 (date) 10:15 or 20:15 (hrs and min) 45.07 (sec and mS)

or

2014 (year) \*159 (day) \*\*27 (date) 10:15 or 20:15 (hrs and min) 45.07 (sec and mS)

or month, date, year, time or time, date, month, year. Place any callout in any order and use "\*" to indicate dead space. Enable/disable any on-off (Relay/O.C.T.) at any specific time/date/year or analog output to any value.

Example 1: K1ON 2015\*\*08 \*\*15 07:15; K1OF 2015\*\*09 \*\*01 \*9:30; Turns on Relay K1 on August 15th at 7:15 a.m.; turns Relay K1 off on September 1st at 9:30 a.m. in year 2015.

Example 2:

2015 (year)\*AN1 \*4.00 (mA) \*\*10 (month) \*\*19 (date) 23:59 (time)

2015 (year)\*AN1 \*8.50 (mA) \*\*10 (month) \*\*20 (date) 05:30 (time)

2015 (year) \*AN112.00 (mA) \*\*10 (month) \*\*20 (date) 09:30 (time)

2015 (year) \*AN116.00 (mA) \*\*10 (month) \*\*20 (date) 12:30 (time) 2015 (year)\*AN1 20.00 (mA) \*\*10 (month) \*\*21 (date) 2400 (time)

Turns analog out to 4.0 mA on October 19th of 2015 at 23:59 (11:59 p.m.), holds it at 4 mA, then switches its outputs to 8.50 mA on the 20th of October at 5:30 a.m., then to 12.00 mA on October 20th at 9:30 a.m., then to 16.00 mA on the 20th of October at 12:30 p.m., then to 20.00 mA on October 21st of 2015 at 12 midnight (2400 hours).

**Date/Time:** You can make your own format to suit your country's needs. Just identify the label and sequence in moving message. You can control any and all four Relays and DAC per channel at will. Default format: U.S. standard: month – date – year – hour – minute – second. Note: Models with 12+ characters (-4) are best suited for calendar-controlled functions.

**Rate (Option F):** (also see "Frequency") Rate is used for slow occurring events such as strokes/minutes, GPM, LPM, barrels/day, etc. instead of fast occurring events which are measure in Hertz (usually seconds) such as radio frequencies or power lines.

**F.1 Digital Mode Rate:** Rate uses the 1/F formula to arrive at the rate per unit of time by counting the number of events that occur within the time base used. If you want to measure/control the process that produces approximately 1/second, use the 1 or 10 second time base. This will give you a reading of approximately 60 EPM (events/minute) or 3600/hr with fractions of an event (3600.3), if required. This is commonly used in oil rigs to measure the barrels/day produced without using a flow meter.

**F.2 Analog Mode Rate:** If your process produces an analog signal such as 4-20 mA, 1-5 mA, 1-5 V, 0-10V or other, you can use our option 1C, 2C, 3C or 4C (voltage to frequency) to convert/scale the analog to digital form and follow the example noted in Digit Mode Rate C.1. Rate is used to calculate/display the frequency of slow occurring events in a short period of time (seconds) without having to wait minutes, hours, or days to find their frequencies. All you need to do is select the time base (gate) in 0.1, 1, or 10 seconds and multiplier (60 [M], 3600 [H], 86900 [D]) to determine the unit of time.

Contact us at: sales@otekcorp.com.

**Ratio (Option G):** Ratio is the ratio of two (2) signals (A/B) to determine their positive (greater) or negative (smaller) frequency vs. each other. Normally, it is used to synchronize their zero crossings such as in power lines (synchrosopes), other matching frequency applications (radio broadcasts), or conveyor speed synchronization. Using the **UPM** analog output as proportionally controlled by the output of the "Ratio" function can automatically synchronize the objects similar to PID.

**Phase Angle (Option H):** (needs 2+ inputs) It measures the phase relationship between any two inputs and its value is displayed in degrees (0:00:00 to 360:00:00) formatted DDD:MM:SEC.000 (degrees, minutes, seconds, and milliseconds of rotation). Best with 6 digit models.

**Draw (Option J):** Use "Draw" to measure/control two variables that should maintain identical amounts, speed, velocity, etc. Draw = A/B – 1 is same as "Ratio," but 1 unit is subtracted from it to give you a zero display (differential) when their ratio is 1:1. Example: Two conveyors should be travelling at the same speed/tension/level and the **UPM** will display the differential between them.

**V-F {Voltage to Frequency Converter} (Option K) :** The **UPM** series offers an optional high accuracy and resolution V-F (also F-V) Converter capable of converting a 0-1 V signal (or 4-20mA and others on request) to 0-100 kHz giving you a 0.00001V (10µV) resolution (+/-0.000001% of full scale). When you use this option, converting pressure to flow and/or volume using the  $\sqrt{\quad}$  function becomes a very economical and accurate alternative to old techniques.



## SECTION B: COUNTERS (Continued)

**Integrations (Option L):** Use "Integration" to integrate, accumulate or totalize events (pulses) over an open period of time (seconds, minutes, hours, days). Also see "Totalizer," "Event Counter," "REM Counter," "Logarithmic," "Anti-Log," and "Volume." Using our V-F (voltage to frequency counter) option, you can convert analog signals to frequency, such as pressure to flow and volume using our "Square Root" extractor function.

Examples: TBW

**L.1 Square Root:** This standard feature of the **UPM** allows you to convert the differential pressure from a pressure transmitter to instantaneous flow, and if you enable the integrator mode, to accumulate (per unit of time) the flow into volume.

## SECTION C: REMOTE DISPLAYS

### C) REMOTE DISPLAYS (Digits 8 & 9, option 58)

As a remote (serial input) display/controller, the **UPM** has no analog or digital inputs enabled or tested, but it can have On-Off Control (Digit 11) and/or Analog Outputs (Digit 12). This will allow you to control your process with your own commands/algorithm and simultaneously display an intelligent message to the operator (HMI/MMI). Imagine the possibilities!

## SECTION D: CONTROLLERS

### D) CONTROLLER:

It can function as a **controller**: It includes an isolated optional analog output (4-20mA) that is internally powered and capable of driving up to 1K Ohm loads. The SPDT relays (4/channel) are capable of driving up to one (1) Amp at 120VAC/30VDC resistive loads. 300V MOVs are included. The open collector transistors (O.C.T.) are isolated from the signal and power inputs and can drive up to 30mA@30VDC/VCE, such as S.S.R.

## CUSTOMS

*Class 1E (Nuclear Safety), Military (to specific MIL-Specs) and industrial grades are available. We have been supplying our armed forces, and the aerospace and nuclear industries for over 30 years.*

## SECTION E: OTHER USES

### E. OTHER USES:

E.1 It can function as a **scientific meter**: It performs math functions (+, -, x, ÷, √), X-Y tables, polynomials, range, log-antilog with exponential (ideal for RAD/REM a.k.a. Gy/SV).

E.2 It can function as a **smart message center**: We use ultra-efficient 15 segment automatic tricolor (R/Y/G) LEDs for full alphanumeric display. Number of characters vary with model. Serial I/O includes isolated USB, RS485 or Ethernet.



E3. It can function as a **data logger (paperless recorder)**: Some models include an optional removable 32GB μSD memory card for data storage and it is configurable to meet your needs via simple commands. Standard factory configuration is when any limit is reached and include the units I.D. number, name, run time stamp, limit data and message.

E.4 **ABOUT ISOLATION**: All models in the OTEK **New Technology** series include 100% isolation (>500VDC) between **ALL** I/O, including serial I/O, power input, control outputs (relays and O.C.T.), analog outputs and signal (analog or digital) inputs. The **UPM-F** is "display only" and has no outputs.

## CONCLUSION

### CONCLUSION:

As you can see, the **UPM** is truly the **Universal Panel Meter** you have been waiting for. All the listed functions (and more) are included and found in the User's Manual, making the **UPM** a versatile microcomputer with controlling capabilities superior to a **PLC** and inferior to it in cost and size. You can use it to perform most any task. If not, contact us to solve the problem together.

Use Note: Remember the **UPM's** recording capabilities with its exclusive 32 GB memory capacity. That can save you lots of headaches.



# UPM-F LOOP POWER VERSION ORDERING INFORMATION 10-12-17


**NOTES:**

1. # of input channels is governed by Digit 7.
2. Options 02 through 18 on Digits 8 & 9 are not available on the UPM-F.

## 1 CHANNEL LOOP POWERED DISPLAY



OTEKS FPM/516 (2" x 3") Case

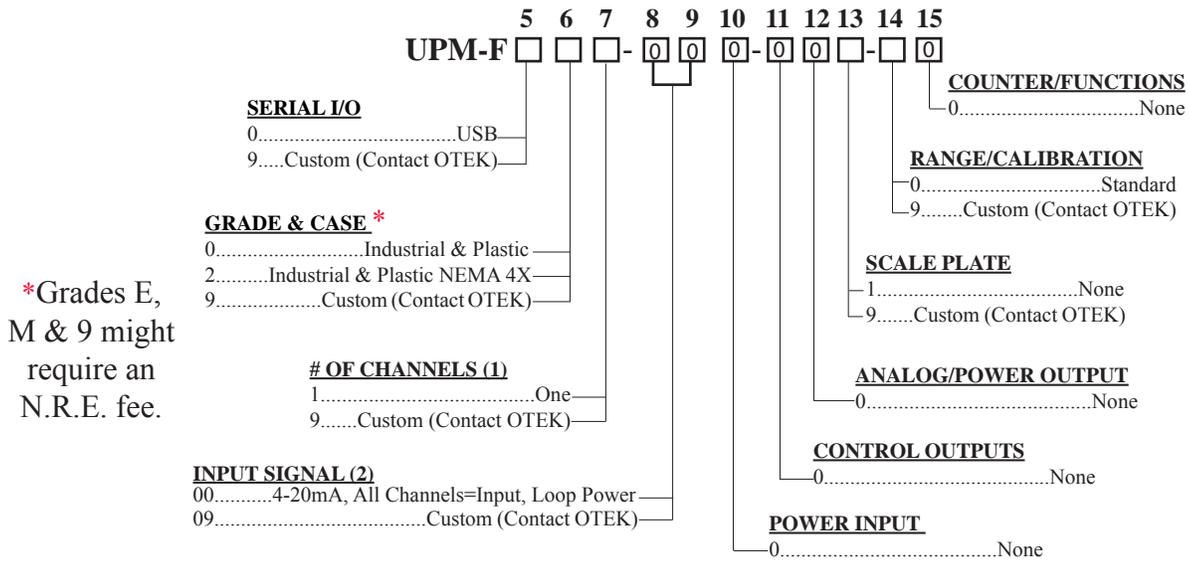

\*Grades E, M & 9 might require an N.R.E. fee.

# UPM-F SIGNAL POWER VERSION ORDERING INFORMATION 10-12-17


**NOTES:**

1. # of input channels is governed by Digit 7.
2. Options 02 through 18 on Digits 8 & 9 are not available on the UPM-F.

## 1 CHANNEL SIGNAL POWERED DISPLAY



OTEKS FPM/516 (2" x 3") Case

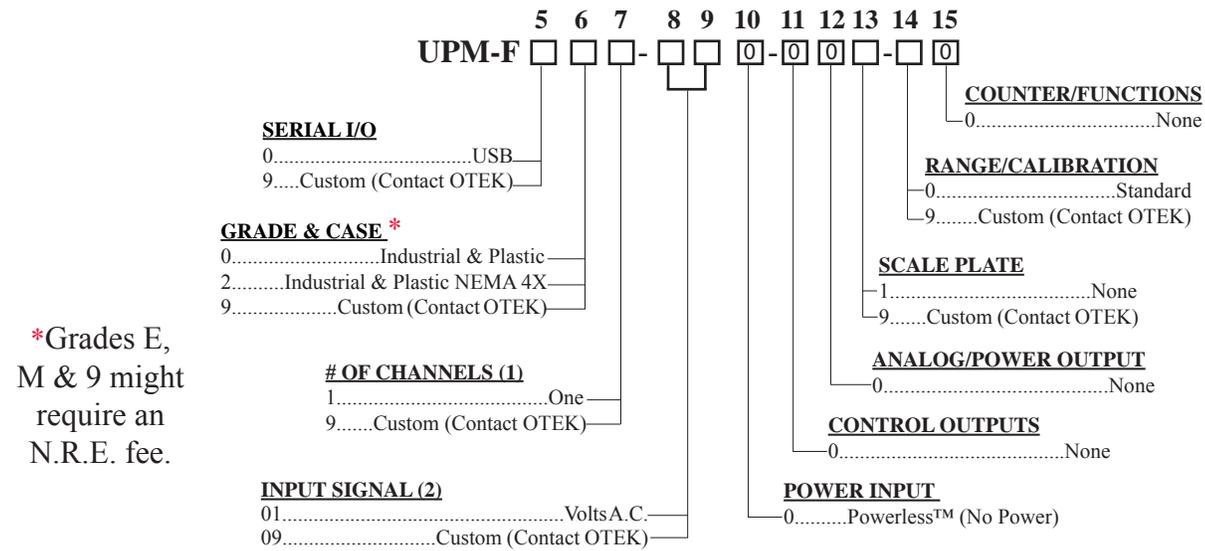

\*Grades E, M & 9 might require an N.R.E. fee.

# UPM-F EXTERNAL POWER ORDERING INFORMATION 10-12-17

SEE NOTES  
BELOW

## 1 CHANNEL EXTERNAL POWERED DISPLAY

**UPM-F**

UPM-F 5 6 7 8 9 10 11 12 13 14 15

**SERIAL I/O**

8.....None  
9.....Custom (Contact OTEK)

**GRADE & CASE \***

0.....Industrial & Plastic  
2.....Industrial & Plastic NEMA 4X  
9.....Custom (Contact OTEK)

\*Grades E, M & 9 might require an N.R.E. fee.

**# OF CHANNELS (1)**

1.....One  
9.....Custom (Contact OTEK)

**INPUT SIGNAL (2-5)**

20.....4-20mA (All Channels Same Input)  
21.....100mV DC F.S.  
22.....1VDC F.S.  
23.....10VDC F.S.  
24.....100VDC F.S.  
25.....10mADC F.S.  
26.....100mADC F.S.  
27.....Watts DC (1Vx1A) F.S.  
28.....Watts DC (1Vx1V) F.S.  
29.....Custom (Contact OTEK)  
30.....0.1V RMS F.S.  
31.....1V RMS F.S.  
32.....10V RMS F.S.  
33.....150V RMS F.S.  
34.....250 V RMS F.S.  
35.....0.1A RMS F.S.  
36.....1A RMS F.S.  
37.....5A RMS F.S.  
38.....W RMS (1Vx1VAC) F.S.  
40.....W RMS (120Vx5A AC) F.S.  
41.....Hertz (10KHz/5V Logic) F.S.  
42.....Hertz (120VAC/40-100 Hz) F.S.  
43.....Hertz (240VAC/30-100 Hz) F.S.  
44.....Hertz (120VAC/500 Hz) F.S.  
45.....Strain-Gage ( $\geq 300 < 4K$  Ohm)  
47.....RTD (PT100)  
48.....RTD (PT1000)  
50.....TC (Type J)  
51.....TC (Type K)  
52.....TC (Type T)  
53.....pH (0-14.00)  
54.....ORP (0-2000mVDC)  
55.....% RH (Specify Sensor)  
56.....Resistance (0-10K $\Omega$ )  
57.....10-50mA F.S.  
58.....None (Serial Input Remote Meter)  
1A.....Any Digit 15 TTL Input Level  
1B.....Any Digit 15 H.V. Input Level  
1C.....Any Digit 15 V-F (Option K) Input Level

**COUNTER/FUNCTIONS**

0.....None (Use Digits 8 & 9)  
1.....Up/Down Counter  
2.....Totalizer  
3.....Quadrature  
4.....Batch  
5.....Frequency  
6.....Period  
7.....RADS  
8.....REM  
9.....Custom  
A.....Up/Down Timer  
B.....Time Interval  
C.....Elapsed Time  
D.....Range  
E.....Julian Clock  
F.....Rate  
G.....Ratio  
H.....Phase Angle  
J.....Draw  
K.....V-F (Voltage to Frequency)  
L.....Integration

**RANGE/CALIBRATION**

0.....Standard  
9.....Custom (Contact OTEK)

**SCALE PLATE**

1.....None  
9.....Custom (Contact OTEK)

**ANALOG/POWER OUTPUT**

0.....None

**CONTROL OUTPUTS**

0.....None

**POWER INPUT**


2.....Non-Isolated 5VDC  
3.....Non-Isolated 7-32VDC  
9.....Custom (Contact OTEK)

**NOTES:**

- # of input channels is governed by Digit 7.
- Options 20 thru 58 available for all models.
- Options 20 through 1C only for externally powered models (Digit 10, options 1-9).
- Option 1A accepts 5V TTI/CMOS inputs or dry contacts (10K $\Omega$  pull ups). Option 1B accepts dry contacts to 150V DC/AC pulses. See "Debouncer/Filter" definitions. Option 1C accepts 0-1V DC & 4-20mA. See "V-F" definition. Conditions: If digit 15="0," then digits 8 & 9 must be options 00-58 and vice-versa. If digit 15="1" thru "L" then digits 8 & 9 must be 1A-1C and digit 10 (power) must be option 1-9. Option H (Phase angle) requires 2 inputs.
- Options 02 through 18 on Digits 8 & 9 are not available on the UPM-F.



## UPM-F MECHANICALS AND TYPICAL CONNECTIONS

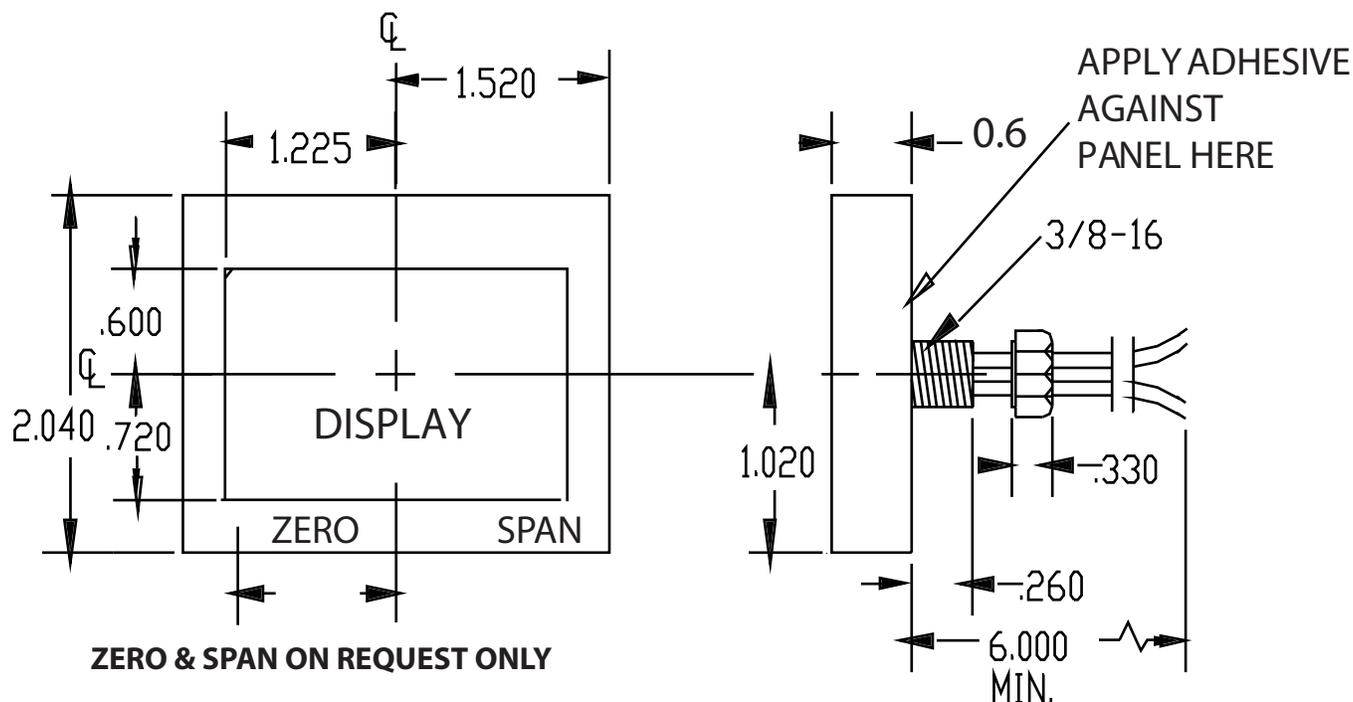

SEE CUSTOMIZED USER'S MANUAL FOR SPECIFIC CONNECTIONS at:

<http://www.otekcorp.com/configurator/upm/>

LOOP POWER (DIGITS 8 & 9 OPTION 00)	SIGNAL POWER (DIGITS 8 & 9 OPTIONS 01 & 04)	EXTERNAL POWER (DIGIT 10, OPTIONS 2 & 3)	
		OPTION 2: 5 V D.C.	OPTION 3: 7-32 V D.C.
YELLOW: + LOOP GREEN: - LOOP	WHITE: V A.C. HIGH BLACK: V A.C. LOW	RED: + 5 VOLT BLACK: GROUND YELLOW: + SIGNAL BLACK: - SIGNAL	BLUE: 7-32 V D.C. BLACK: GROUND YELLOW: + SIGNAL GREEN: - SIGNAL

**Mounting Instructions:**

1. Drill a 3/8 - 1/2" diameter hole.
2. Attach supplied double sided tape to back of UPM.
3. Pass wires through hole.
4. Align and Press UPM on panel (that is all!)
5. Don't pull on wires (26 ga)!

**DOWNLOADS:**

For manuals, user software or drivers:

[www.otekcorp.com](http://www.otekcorp.com)

